



Frequently Asked Questions

1. How often should I change my oil (engine)?

Check the corner of front windshield you will find a sticker that tells you (the date and km) when your due for an oil change. Approximately every 3 months or 5000 km, whichever comes first.

2. What should I check before I plan a road trip?

There are 2 things to check a) Tires b) Fluids. **Come see us to make sure your car is in great shape!**

a) Tires: Check the tire pressure (refer to your car manual for the appropriate pressure) and **check the tire treads** (video) for excessive wear (make sure the tire wear bars between the tire treads has not been reached) Check also for Spare tire, and jack!

b) Fluids: You might need to replace or refill the liquids. Lastly, be sure to fill the windshield wiper fluids and antifreeze.

- Windshield washer
- Engine Oil level
- Transmission fluid level
- Engine coolant
- Brake Fluid
- Powersteering fluid

3. How often should I change my transmission oil and filter?

Approximately every 50 000 km.

4. How do I change a flat tire?

To change a flat tire, check out this video!

<http://www.youtube.com/watch?v=CoojmEkp45U&feature=r>

<http://www.youtube.com/watch?v=K5mofFOD-ck>

5. How to Inflate Car Tires?

To inflate Tires, check out this video!

<http://www.youtube.com/watch?v=ZCePReWZaMg&feature=related>

Although the video states 35psi, experience tells that 32psi is a safe tire pressure.